

FILTER NOZZLE WITH PREASSEMBLED BOLT AND SADDLE

1

Insert the Nozzle into the hole of the pipe



Check holes in the plate!
Hole range 28,0 - 28,5 mm
Pipe thickness max 25 mm

2

Screw the Nozzle and keep the expansion bolt blocked



Check the soft saddle!
Each pipe diameter has its saddle (75-90-114-160)

SUGGESTED DEVICES
CHDX LOCKING WRENCH

3

Torque setting 5.0 Nm
Screwing speed less than 400 rpm



Check the assembly!
The Nozzle will not have to move and saddle have to join perfectly with the pipe

SUGGESTED DEVICES

CHTW TORQUE SCREWDRIVER
CHTC TORQUE SCREWDRIVER

