

FILTER NOZZLE WITH PREASSEMBLED BOLT PTL



Insert the Nozzle into the hole from the top side of the plate



Check holes in the plate! Hole range 28,0 - 28,5 mm



Screw the Nozzle and keep the expansion bolt blocked



Check plate thickness! Make sure the thickness range 5.0 – 33.0 mm





Torque setting 5.0 Nm Screwing speed less than 400 rpm

SUGGESTED DEVICES

CHTW TORQUE SCREWDRIVER CHTC TORQUE SCREWDRIVER



Check the assembly!
The Nozzle will not have to
move and have to join
perfectly with the plate





